


HELPFUL HINTS

- Know all of your appliance sizes before you start.
- Allow space from side of cabinets to wall (fillers) so drawers don't hit jams or wall.
- Inside corners should be large enough (fillers) to let drawers open without hitting anything.
- In most cases appliances can be moved several inches to accommodate the new layout.

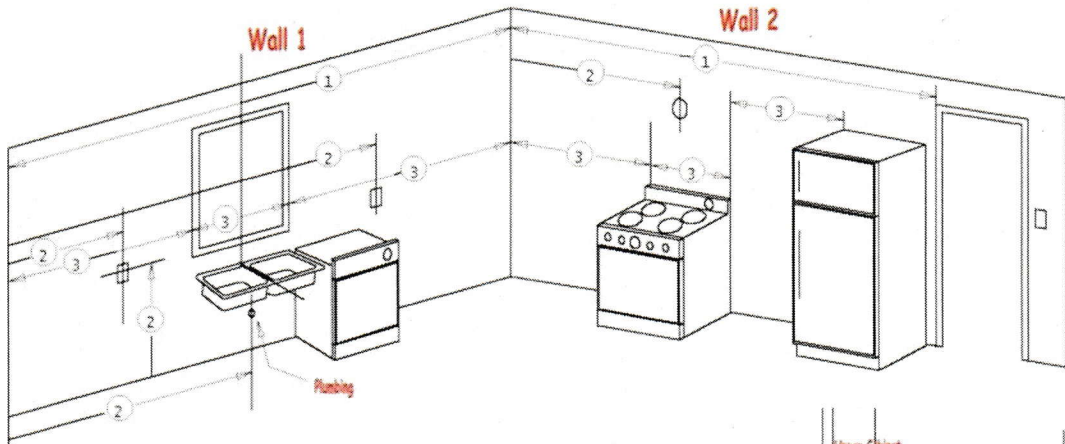



Start on the left side of wall 1, work to the right around the room. Measure overall length of each wall first (measurement 1) Record this on the Lay-out Guide.

Measure to the center of outlets, plumbing, vents or ducting. (measurement 2) Record this on the Lay-out Guide.

Measure to all breaks in the wall such as windows, doors and any opening. On any opening that has molding measure to the outside edge and allow for appliances. (measurement 3) Record this on the Lay-out Guide.

Now you can do your cabinet floor plan. Start in the corner at the "0" point of the Lay-out Guide and work out from there. Remember large squares = 1 foot and small squares = 3 inches.

The Sample Kitchen Design will help show you cabinet layout and spacing.

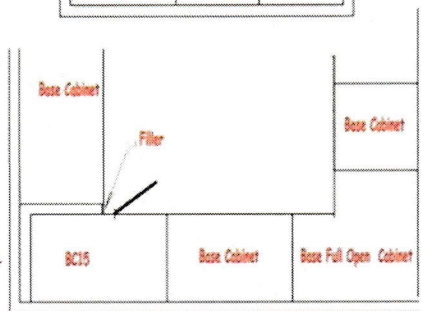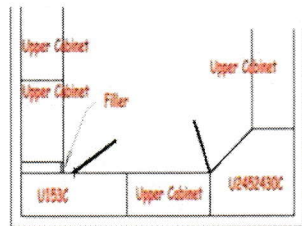

DESIGN GUIDE